



## SKYCAST User Manual

### In/Out Configuration

- In/Out Mode: Artnet (default) / sACN
- RDM: Disabled (default) / Enabled

### Network Configuration

- IP Address: 192.168.7.1
- Subnet Mask: 255.255.255.0

## Instructions

### 1. Connect SKYCAST:

- Plug the SKYCAST device into a USB port (USB-A for SKYCAST-A or USB-C for SKYCAST-C).
- Wait for the LEDs to light up.
  - **Green LED:** Network connection established.
  - **Orange LED:** DMX Signal active.
  - **Blue LED:** Radio status indicator.

### 2. Access SKYCAST HUB:

- Once the green LED is on, open your web browser.
- Enter the IP address 192.168.7.1 into the URL search bar.
- This will direct you to the SKYCAST HUB.

### **3. Pairing SKYCAST:**

- Press the "Sync" button to pair SKYCAST with a CRMX-enabled light or SKYNODE.
- The blue LED will flash rapidly during the pairing process.
- Once paired, the blue LED will flash at longer intervals.

### **4. Verify Connection:**

- Open the "Sliders" page to access the SKYCAST User Sliders.
- Test to ensure the connection has been successfully established.

### **5. Ready to Use:**

- After confirming the connection, the SKYCAST is now ready for operation.

For any additional assistance, please refer to the troubleshooting section of the manual or contact our support team.